


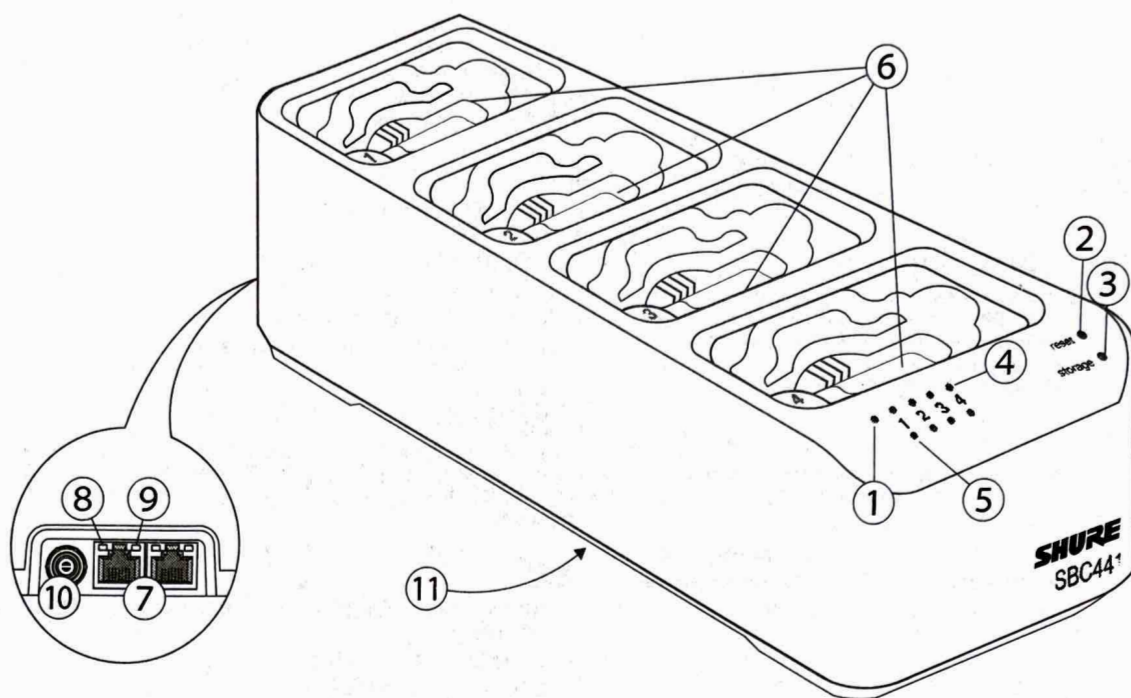

① Power LED

- White = Power is on
- Red = Charger is in storage mode

② Reset Button

Press and hold to restore charger factory settings, including network settings.

③ Storage Mode Button

Press and hold to activate storage mode, which charges or discharges batteries to the optimal voltage for long-term storage.

④ Charging Status LEDs

- Red = Charging
- Green = Charging complete
- Amber = Battery is in storage mode

⑤ Error LEDs

Flashes amber to indicate a problem charging batteries. Errors are also displayed in Wireless Workbench. See LED Indicators for details.

⑥ Charging Slots

Charges any combination of 4 SB910 batteries or ADXR bodypacks.

⑦ Ethernet Ports

Connect to a network to remotely monitor batteries and control charger settings using Wireless Workbench.

⑧ Ethernet Link Speed LED (Amber)

- Off = 10 Mbps
- On = 100 Mbps

⑨ Ethernet Status LED (Green)

- Off = No network link
- On = Network link established
- Flashing = Network link active

⑩ Power Input

Connect to power supply.

⑪ Charger Connector

Fold-out magnetic plate provides physical connection between chargers.

Controles y conectores

① LED de alimentación

- Blanco = La alimentación está encendida
- Rojo = El cargador está en modo de almacenamiento

② Botón Restablecer

Manténgalo presionado para restaurar los ajustes predeterminados de fábrica del cargador, que incluye los ajustes de red.

③ Botón de modo de almacenamiento

Manténgalo presionado para activar el modo de almacenamiento, que carga o descarga las baterías al voltaje óptimo para un almacenamiento prolongado.

④ LED de estado de carga

- Rojo = Cargando
- Verde = Carga completa
- Ámbar = La batería está en modo de almacenamiento

⑤ LED de error

Destella en ámbar para indicar un problema al cargar las baterías. Los errores también se muestran en el Wireless Workbench. Consulte Indicadores LED para obtener detalles.

⑥ Ranuras de carga

Cargue cualquier combinación de 4 baterías SB910 o unidades de cuerpo ADXR.

⑦ Puertos Ethernet

Conéctese a una red para monitorear de manera remota las baterías y controlar las configuraciones del cargador del control utilizando el Wireless Workbench.

⑧ LED de velocidad de enlace Ethernet (Ambar)

- Apagado = 10 Mbps
- Encendido = 100 Mbps

⑨ LED de estado de Ethernet (Verde)

- Apagado = Sin enlace de red
- Encendido = Enlace de red establecido
- Destellando = Enlace de red activo

⑩ Entrada de alimentación

Conecte a la fuente de alimentación.

⑪ Conector del cargador

La placa magnética desplegable permite que los cargadores se conecten de forma física.